
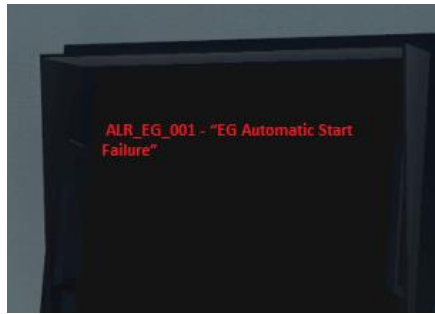










## Steps in the Application of Scenario 19A (SCENARIO GR002. A)

1	Avatar of player begins in front of the engine room.	
2	Player goes to ECR control panel	
3	Read alarm messages on ECR control panel (or to EGCP control panel): “EG Automatic Start Failure” will appear with red letters	
4	Press Acknowledge button	
5	The alarm horns will SILENT and visual indicator lights will go OFF. Now the letters on screen, “EG Automatic Start Failure”, will change color to yellow.	
6	Check voltmeter gauge on control panel	
7	Go to EGR at the end of the floor	

8	Go in front of EGCP panel change over the mode switch at EGCP from Auto to Manual	
9	Press the EGCP start button and the emergency generator will start working Check voltmeter gauge on EGCP Check if engine will come on load automatically	
10	Check alarm status, if messages on ECR control panel or on EGCP computer panel will be DELETED	
11	For stopping the emergency generator, press the STOP button at EGCP Change back the control from Manual to Auto	
12	Finish	