


Steps in the Application of Scenario 9

1	Avatar of player begins front of the engine room.	
2	Player goes to ECR alarm computer panel	 A photograph of a control panel with two monitors and two keyboards. The top monitor displays a red alarm message: "ECR System Master Pump High Pressure".
3	Read messages about alarm on ECR alarm computer panel	 A close-up of the top monitor showing the alarm message: "FOWXX_002-FUEL PRESSURE LOW - 5.8 bar".
4	Press Acknowledge button on the keyboard	 A close-up of a keyboard with a red button labeled "ACKNOWLEDGE" and another button labeled "E".
5	Go to bottom floor in front of fuel pump control panel	 A photograph of a green fuel pump control panel in a room with white pipes and tanks. A UI overlay shows "FO SLAVE PUMP" and a button labeled "E".
6	Go in front of SLAVE fuel pump control and switch ON slave pump and switch OFF MASTER fuel pump	 A photograph of the green fuel pump control panel with a UI overlay titled "FO SLAVE PUMP CONTROL". The "STATUS" is shown as a green bar, and there is a "Close" button.

7 Go in front of MASTER FO pump and press REPAIR – REMOVE – RE-INSTALL MASTER pump

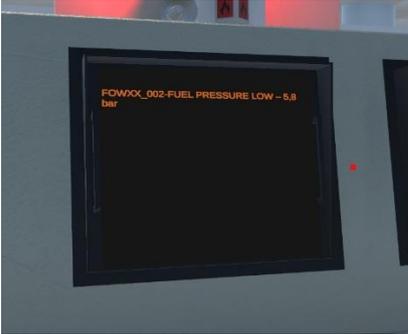

9 Finished Scenario