## Steps in the Application of Scenario 2

1	Avatar of player begins front of the engine room.	
2	Player goes to MOP	
3	Read messages about alarm on MOP screen	EICUXXM_0353-Hydr. Press. too high
4	Press Acknowledge button	ump High Pressure
5	Check LO pressure gauge on MOP	
6	Check LO pressure gauge on panel in engine room	

7	Go to -1 floor	
8	Go next to LO Cooler, they are front of engine	
9	Check input and output valves of slave Cooler (open)	
10	Go front of local panel of LO slave Cooler	
11	Start slave Cooler (If slave pump does not run)	
12	Go front of local panel of LO Master Cooler	
13	Stop master Cooler	

14	Close input and output valves of master Cooler	
15	Repair the master Cooler	D LO MASTER PUMP War Wur Omstr Wur Remove Repair Re-Install Starus : OFF
16	Open input and output valves of master Cooler	
17	Go front of local panel of LO Master Cooler	
18	Run master Cooler	
19	Go front of local panel of LO slave Cooler	
20	Stop slave Cooler (If slave pump does not run)	
21	Check Alarm Status light on the wall or engine room	
22	Finish	