
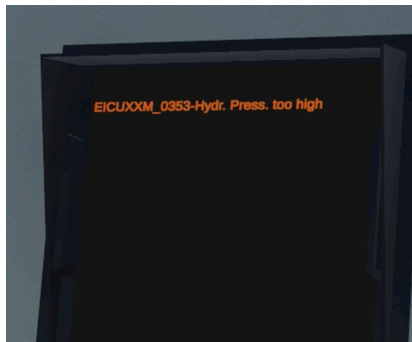 
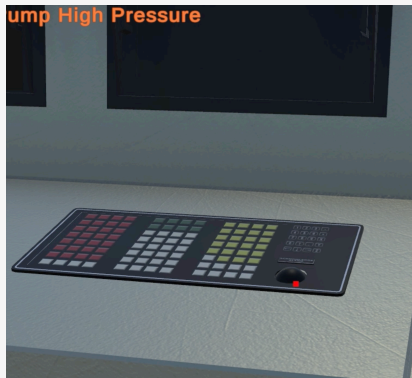 


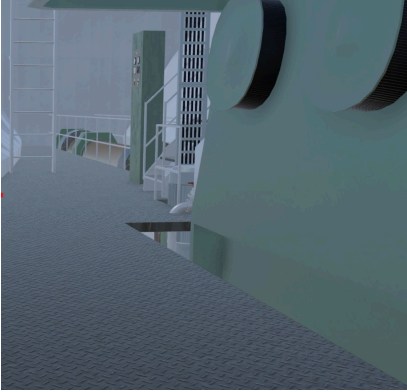 

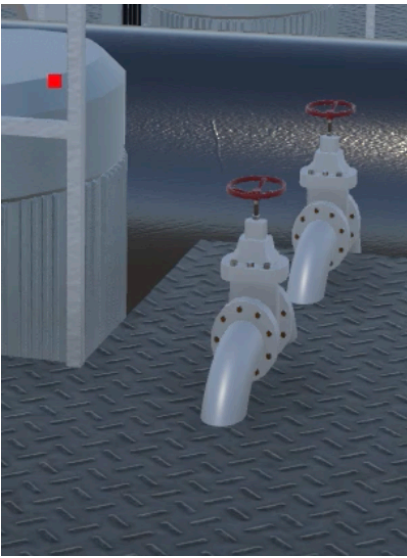 



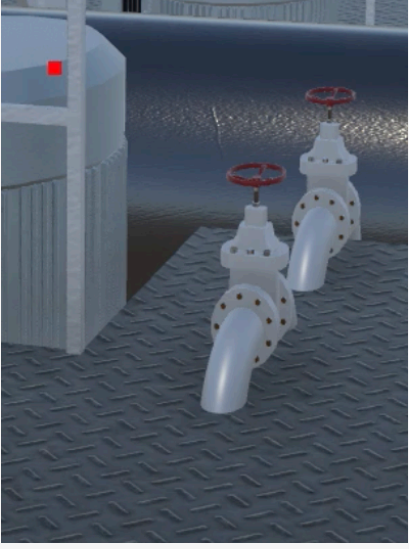 
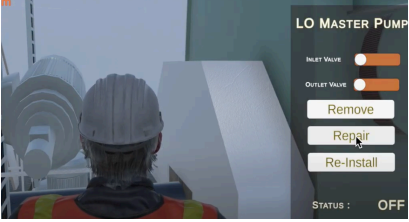 
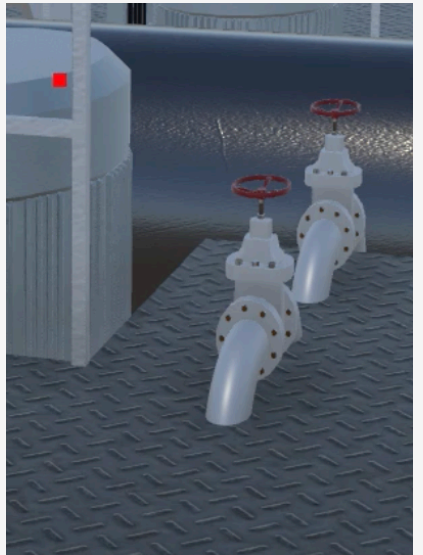 


Steps in the Application of Scenario 3

1	Avatar of player begins front of the engine room.	
2	Player goes to MOP	
3	Read messages about alarm on MOP screen	
4	Press Acknowledge button	
5	Check LO pressure gauge on MOP	
6	Check LO pressure gauge on panel in engine room	

7	Go to -2 floor	
8	Go next to LO pumps, they are behind of engine	
9	Check input and output valves of slave pump (open)	
10	Go front of local panel of LO slave pump	

11	Start slave pump (If slave pump does not run)	
12	Go front of local panel of LO Master pump	
13	Stop master pump	
14	Close input and output valves of master pump	
15	Repair the master pump	

16	Open input and output valves of master pump	
17	Go front of local panel of LO Master pump	
18	Run master pump	
19	Go front of local panel of LO slave pump	
20	Stop slave pump (If slave pump does not run)	
21	Check Alarm Status light on the wall or engine room	
22	Finish	