
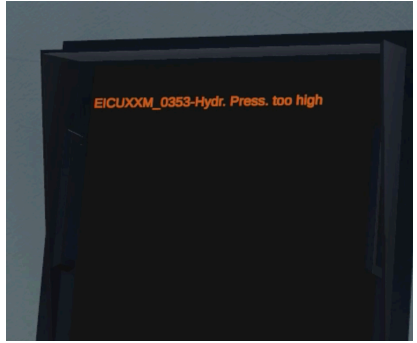
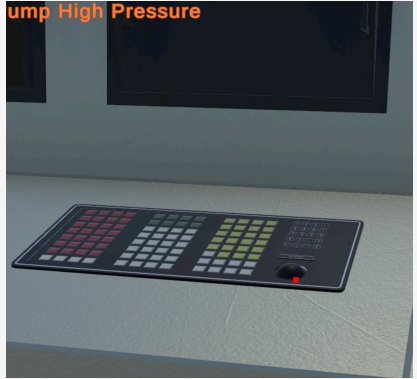


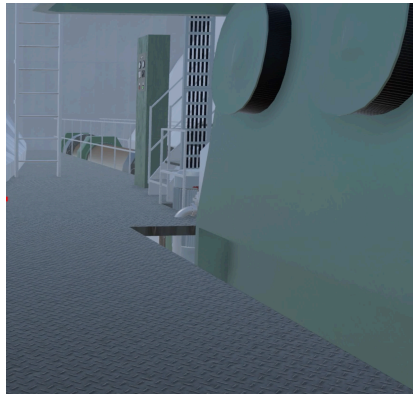
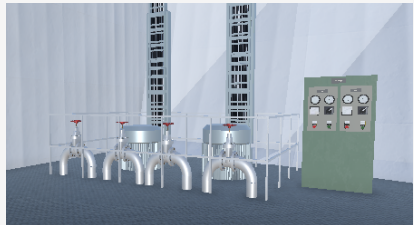
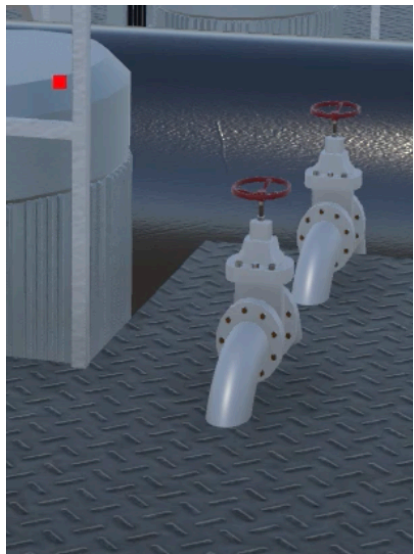


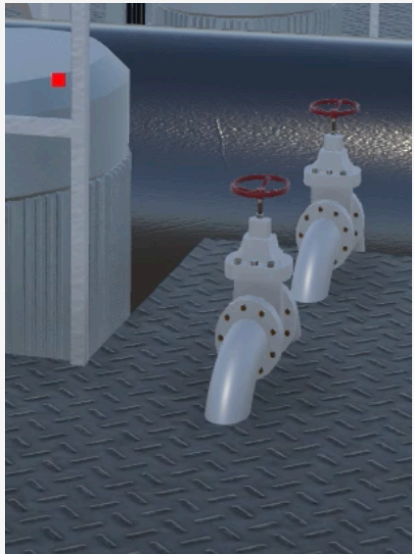
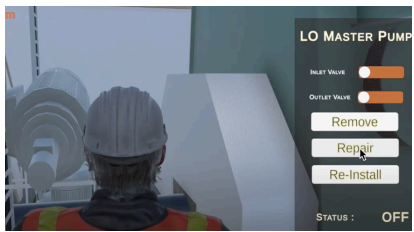
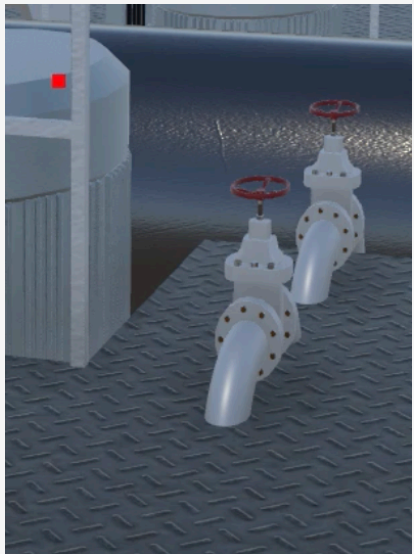







## Steps in the Application of Scenario 5


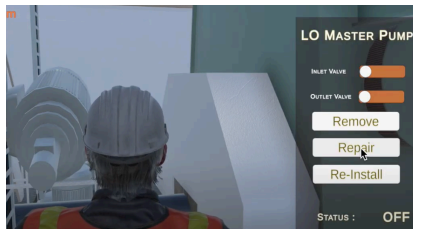

1	Avatar of player begins front of the engine room.	
2	Player goes to MOP	
3	Read messages about alarm on MOP screen	
4	Press Acknowledge button	
5	Check CC pressure gauge on MOP	
6	Check CC pressure gauge on panel in engine room	

7	Go to -2 fCCor	
8	Go next to CC pumps, they are front of engine	
9	Check input and output valves of slave pump (open)	
10	Go front of local panel of CC slave pump	
11	Start slave pump (If slave pump does not run)	

12	Go front of local panel of CC Master pump	
13	Stop master pump	
14	Close input and output valves of master pump	
15	Repair the master pump	
16	Open input and output valves of master pump	

17	Go front of local panel of CC Master pump	
18	Run master pump	
19	Go to -1 floor	
20	Go next to LO Cooler, they are front of engine	
21	Check input and output valves of slave Cooler (open)	
22	Go front of local panel of LO slave Cooler	
23	Start slave Cooler (If slave pump does not run)	
24	Go front of local panel of LO Master Cooler	



25	Stop master Cooler	
26	Close input and output valves of master Cooler	
27	Repair the master Cooler	
28	Open input and output valves of master Cooler	
29	Check Alarm Status light on the wall or engine room	
30	Finish	